

Cell Phone System , (9ZG),(9ZV)

From May 2016



Audi

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.



Information Electronics Control Module 1


- J285 Instrument Cluster Control Module
- J533 Data Bus on Board Diagnostic Interface
- J794 Information Electronics Control Module 1
- ST4 Fuse Panel 4
- SF7 Fuse 7 (On Fuse Panel F)
- T2aq 2-Pin Connector
- T2aw 2-Pin Connector, Black
- T2bm 2-Pin Connector
- T8f 8-Pin Connector, Black
- T12d 12-Pin Connector, Gray
- T17g 17-Pin Connector, In the Left A-Pillar Connector Station, Blue
- T32 32-Pin Connector
- T32b 32-Pin Connector, Black

- 372 Ground Connection 7 (in Main Wiring Harness)
- 373 Ground Connection 8 (in Main Wiring Harness)
- 687 Ground Connection 1 on Center Tunnel
- B159 Diagnostic Connection (in Interior Wiring Harness)
- B444 OBD Connection 1 (in Main Wiring Harness)
- B607 Connection 3 (in Interior Wiring Harness)


- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 For Vehicles Without Noise Reduction
- *3 Fiber Optic Cable
- *4 Refer to Applicable Wiring Diagram for Data Bus Networking

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

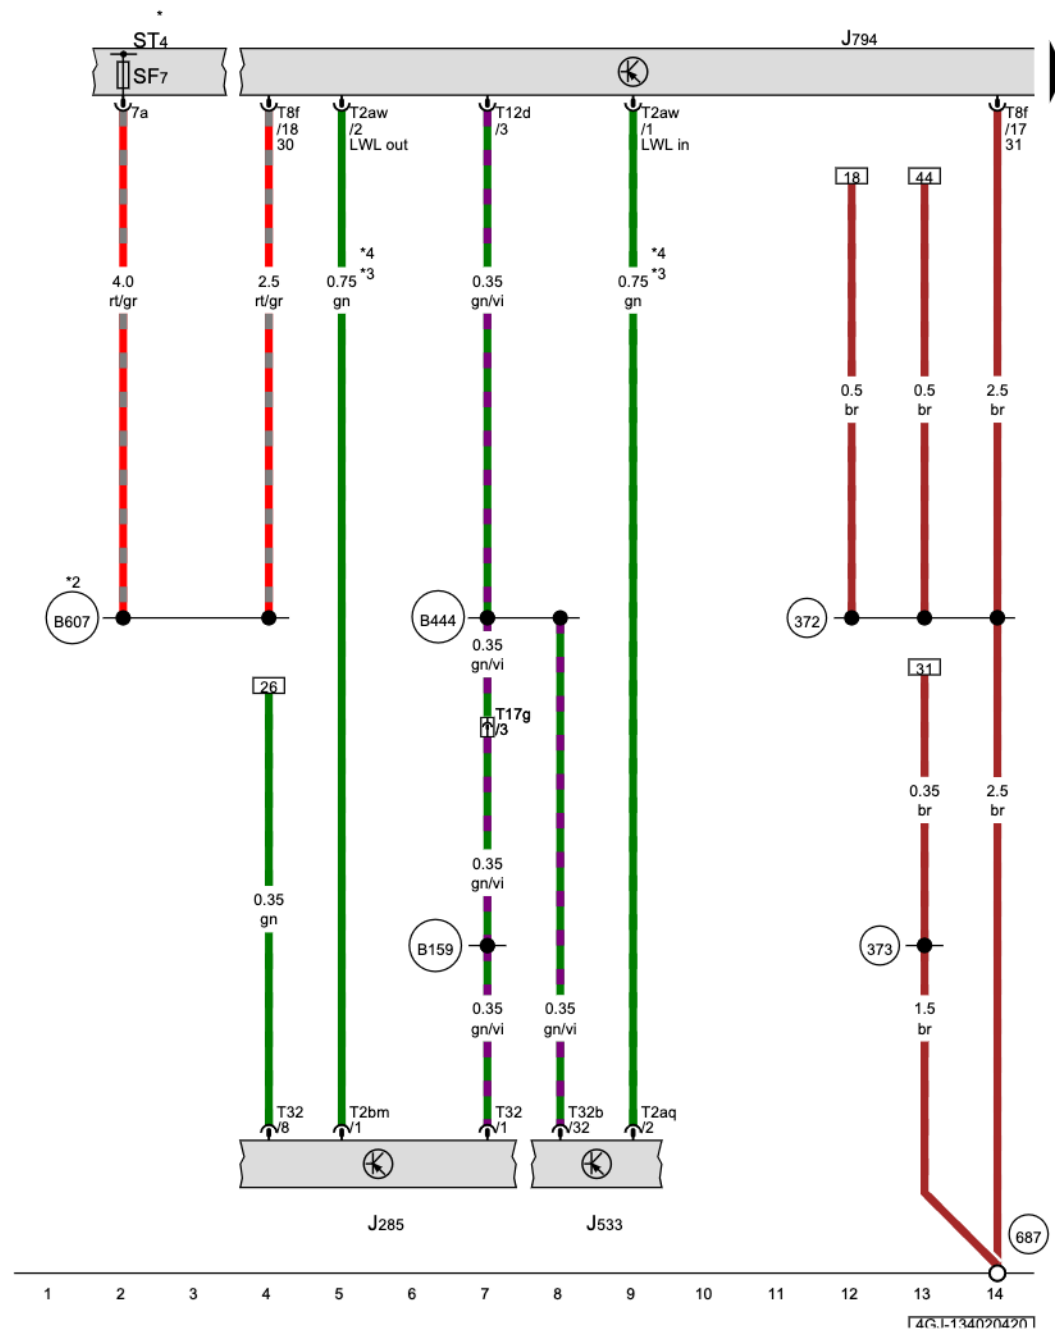

Multimedia System Control Head, Information Electronics Control Module 1

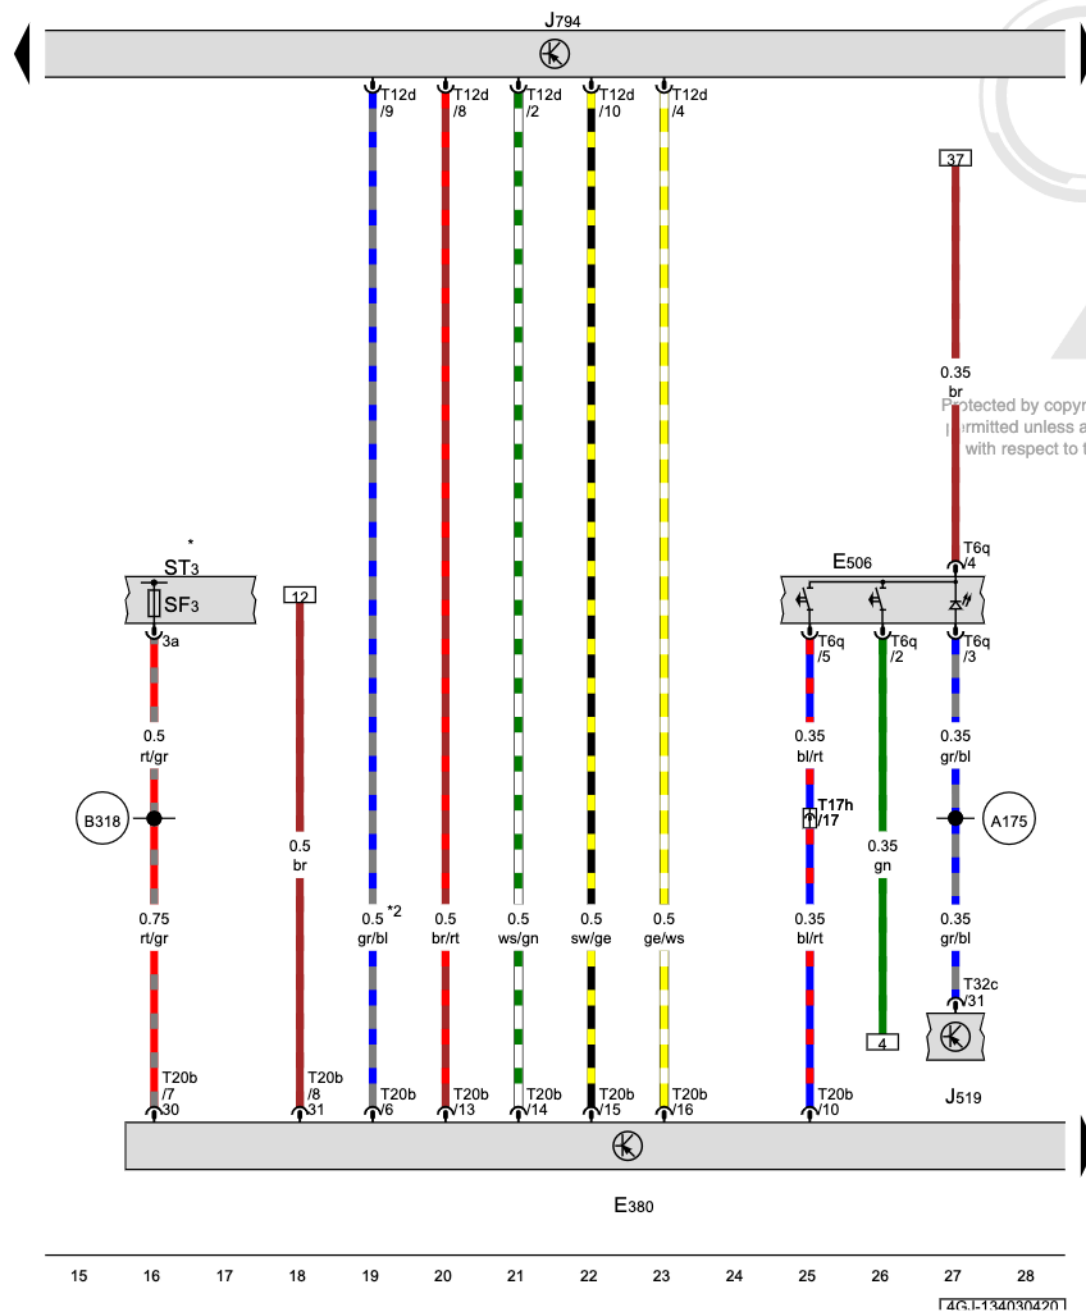


- E380 Multimedia System Control Head
- E506 Display Unit Button
- J519 Vehicle Electrical System Control Module
- J794 Information Electronics Control Module 1
- ST3 Fuse Panel 3
- SF3 Fuse 3 (On Fuse Panel F)
- T6q 6-Pin Connector, Black
- T12d 12-Pin Connector, Gray
- T17h 17-Pin Connector, In the Left A-Pillar Connector Station
- T20b 20-Pin Connector, Red
- T32c 32-Pin Connector

A175 Connection 58s (in Instrument Panel Wiring Harness)

B318 Positive Connection 4 (30a) (in Main Wiring Harness)

* Refer to Applicable Wiring Diagram for Fuse Positions
*2 Prompt Wire

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

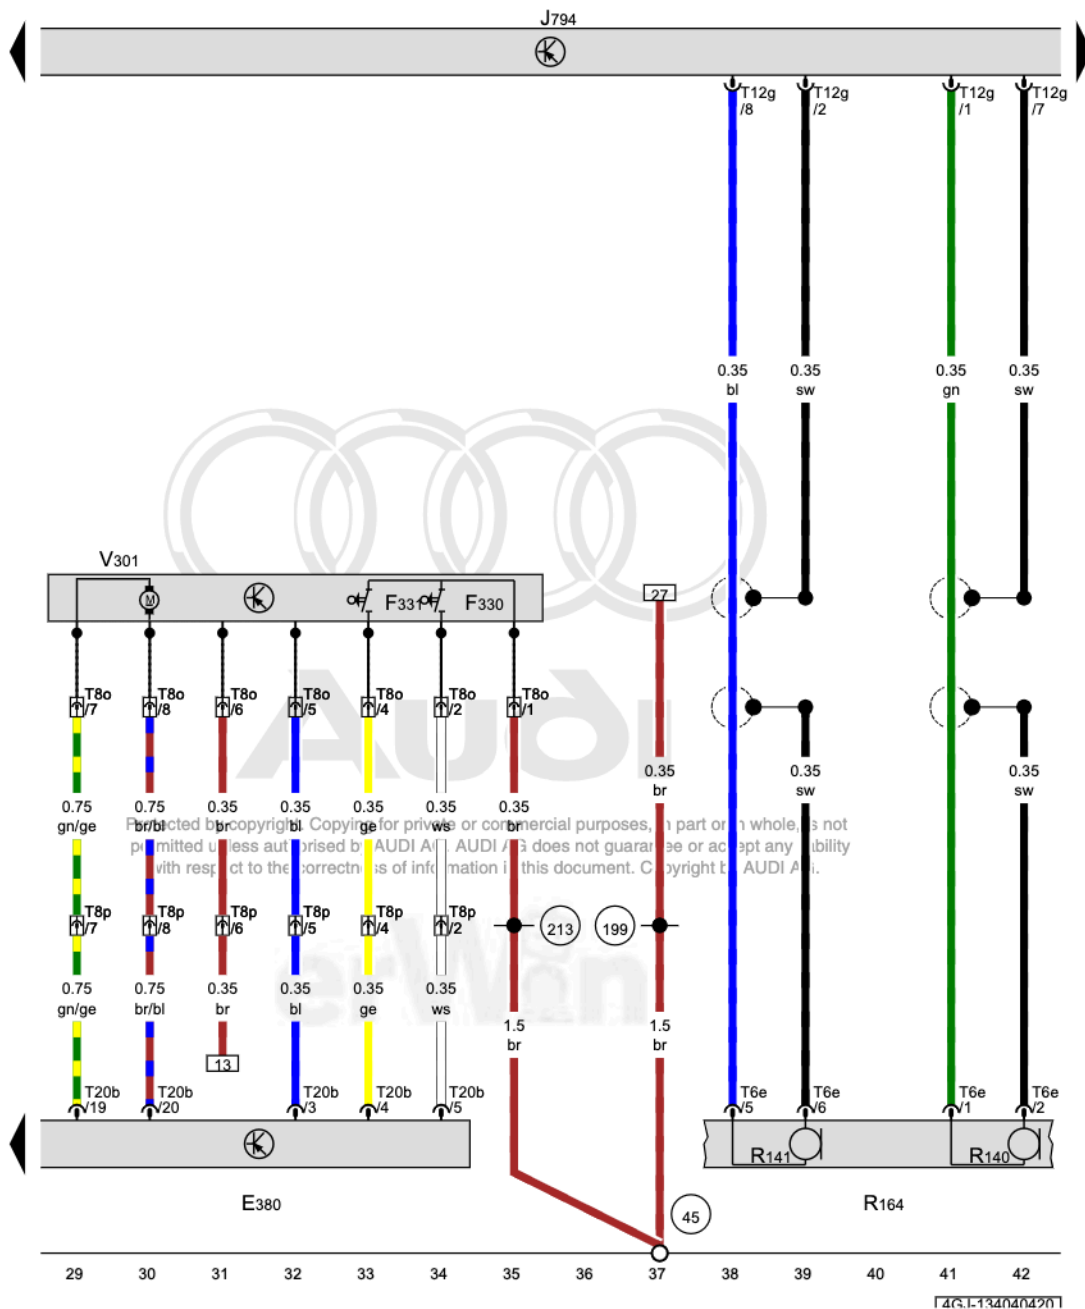


Multimedia System Control Head, Display -Open- Stop Switch, Information Electronics Control Module 1, Microphone Unit in Front Roof Module, Display Opening/Closing Motor

- E380 Multimedia System Control Head
- F330 Display -Open- Stop Switch
- F331 Display -Closed- Stop Switch
- J794 Information Electronics Control Module 1
- R140 Left Front Microphone
- R141 Right Front Microphone
- R164 Microphone Unit in Front Roof Module
- T6e 6-Pin Connector, Blue
- T8o 8-Pin Connector, Black
- T8p 8-Pin Connector, Behind the Left Front Center Console, Black
- T12g 12-Pin Connector, Blue
- T20b 20-Pin Connector, Red
- V301 Display Opening/Closing Motor

- 45 Ground Connection Behind Instrument Panel, Center
- 199 Ground Connection 3 (in Instrument Panel Wiring Harness)
- 213 Ground Connection (in Instrument Panel Wiring Harness)

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
vi = lilac
ge = yellow
or = orange
rs = pink

Information Electronics Control Module 1, Telephone Baseplate, LTE Antenna 1, LTE Antenna 2

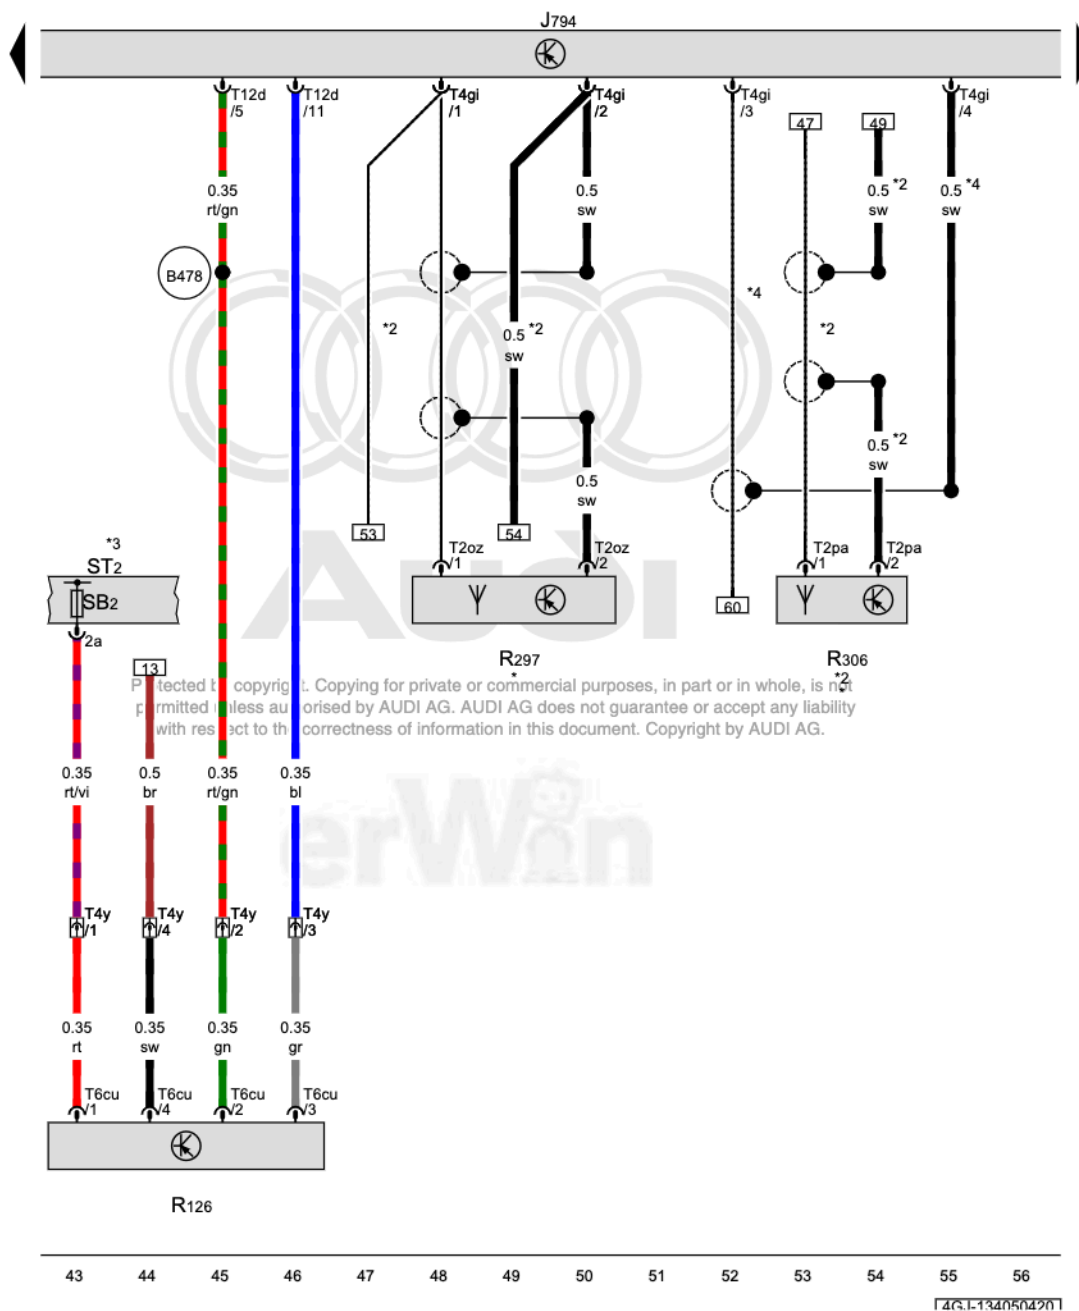


- J794 Information Electronics Control Module 1
- R126 Telephone Baseplate
- R297 LTE Antenna 1
- R306 LTE Antenna 2
- ST2 Fuse Panel 2
- SB2 Fuse 2 (On Fuse Panel B)
- T2oz 2-Pin Connector
- T2pa 2-Pin Connector
- T4gi 4-Pin Connector, Purple
- T4y 4-Pin Connector, Near the Telephone Baseplate
- T6cu 6-Pin Connector, Black
- T12d 12-Pin Connector, Gray

B478 Connection 14 (in Main Wiring Harness)

- * Optional Equipment
- *2 For USA Only
- *3 Refer to Applicable Wiring Diagram for Fuse Positions
- *4 Not for USA

Information Electronics Control Module 1, Roof Antenna

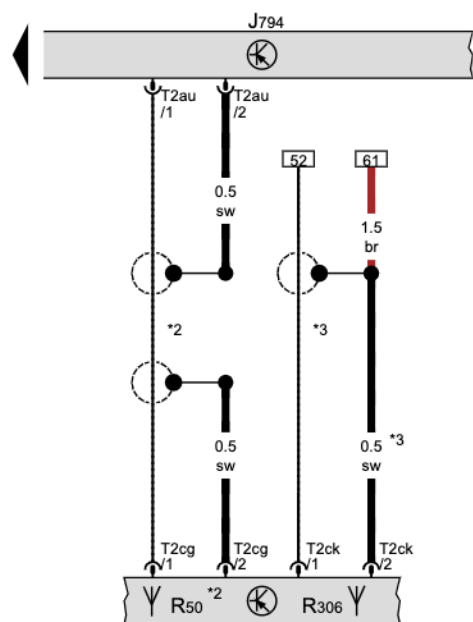

- J794 Information Electronics Control Module 1
- R50 GPS Antenna
- R216 Roof Antenna
- R306 LTE Antenna 2
- T2au 2-Pin Connector, Blue
- T2cg 2-Pin Connector
- T2ck 2-Pin Connector

654 Ground Connection on Right D-Pillar

- * Optional Equipment
- *2 GPS Antenna Connection
- *3 Not for USA

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = lilac
- vi = lilac
- ge = yellow
- or = orange
- rs = pink

57 58 59 60 61 62 63 64 65 66 67 68 69 70

14511340604201